





# VDirector instruction

## Installation

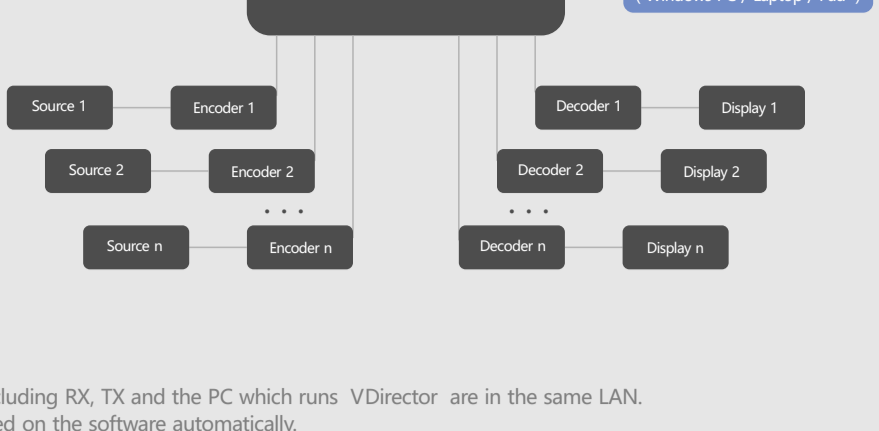


## Connection

Make sure all the equipments including RX, TX and the PC which runs VDirector are in the same LAN.  
All the TX and RX will be displayed on the software automatically.

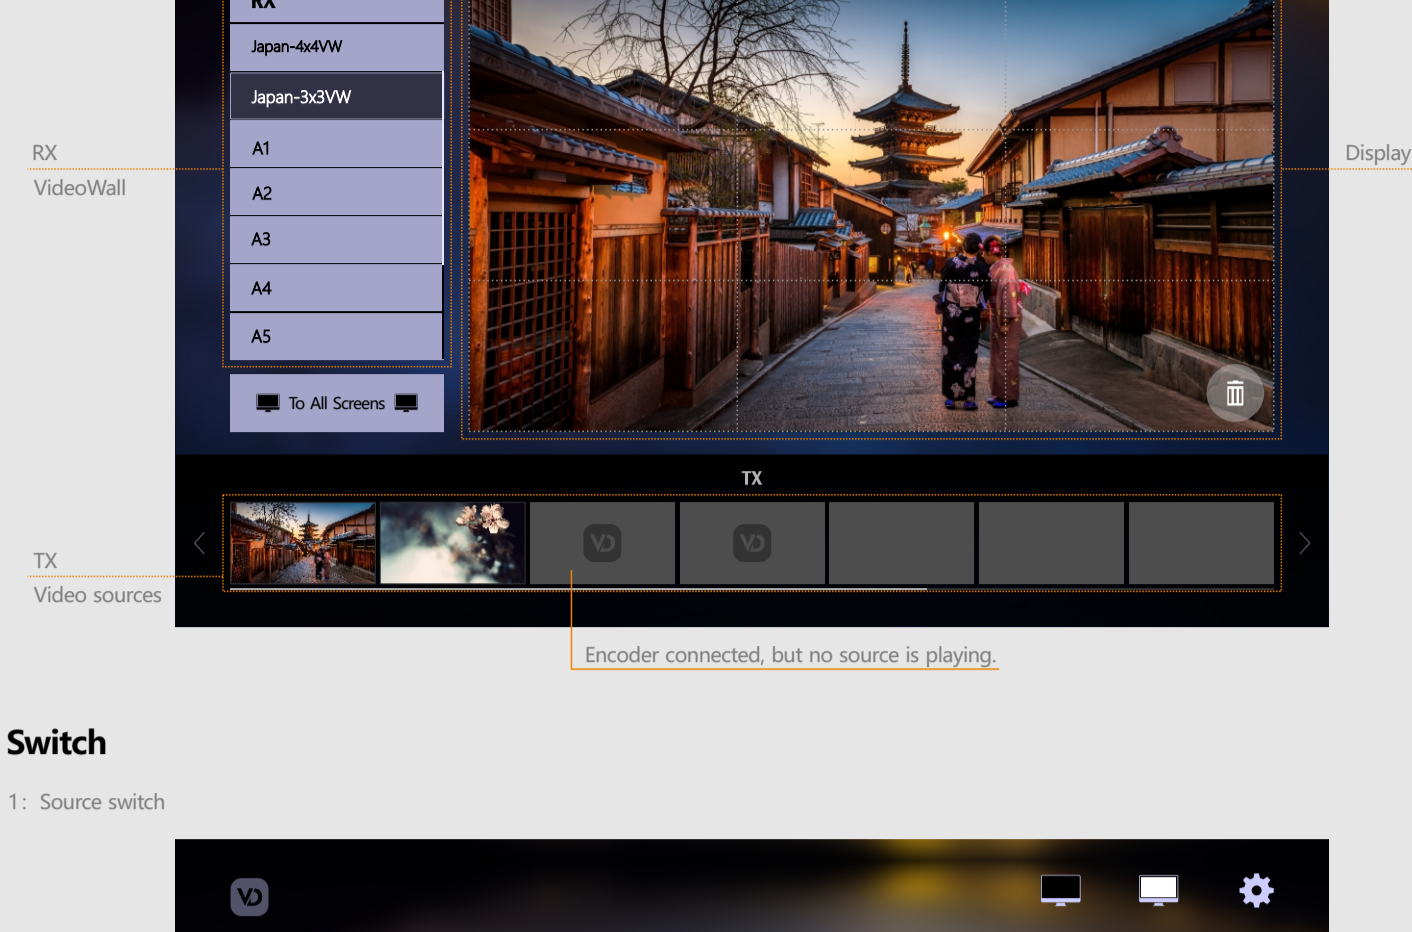


## Switch

1: Source switch

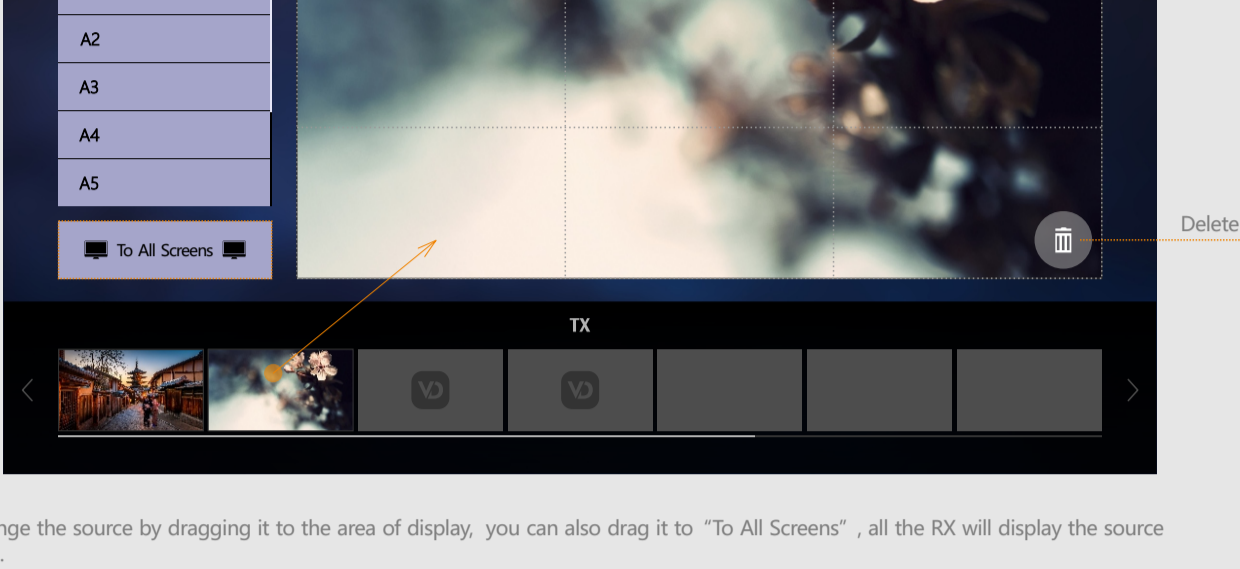



You can change the source by dragging it to the area of display, you can also drag it to "To All Screens", all the RX will display the source you selected.

2: VideoWall switch



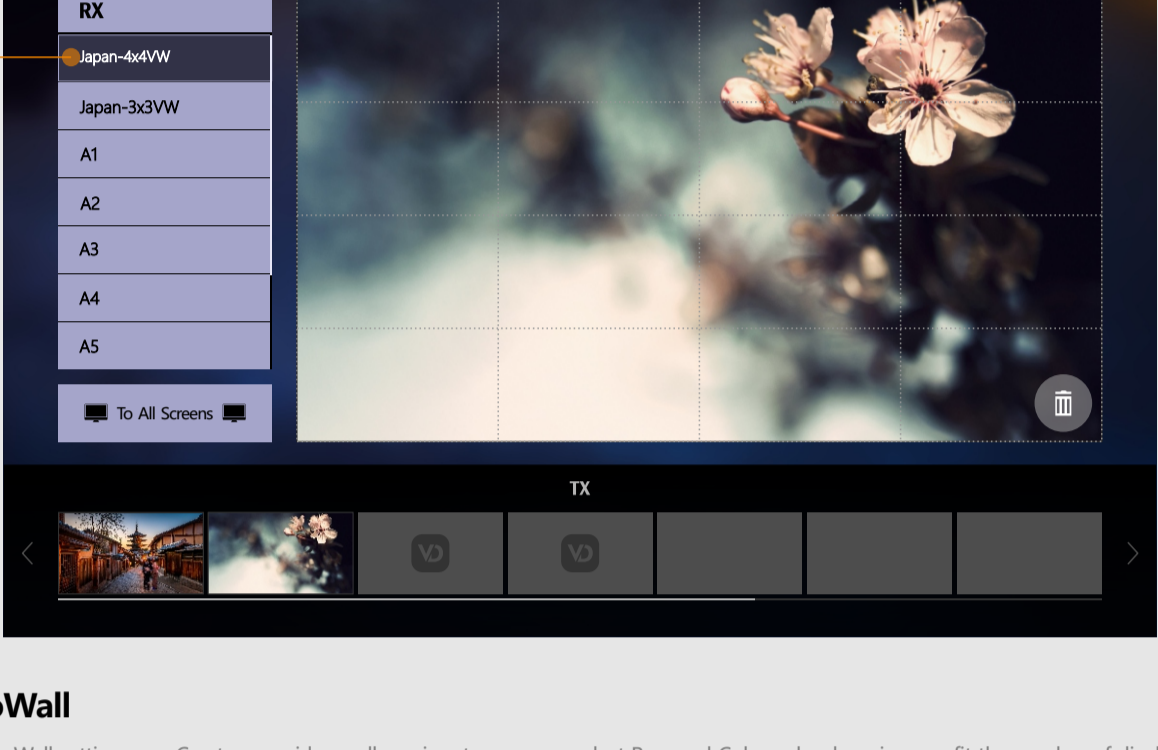


## New VideoWall

Settings ---- Video Wall settings ---- Create new video wall ---- input name ---- select Row and Column by dragging ---- fit the number of display frame

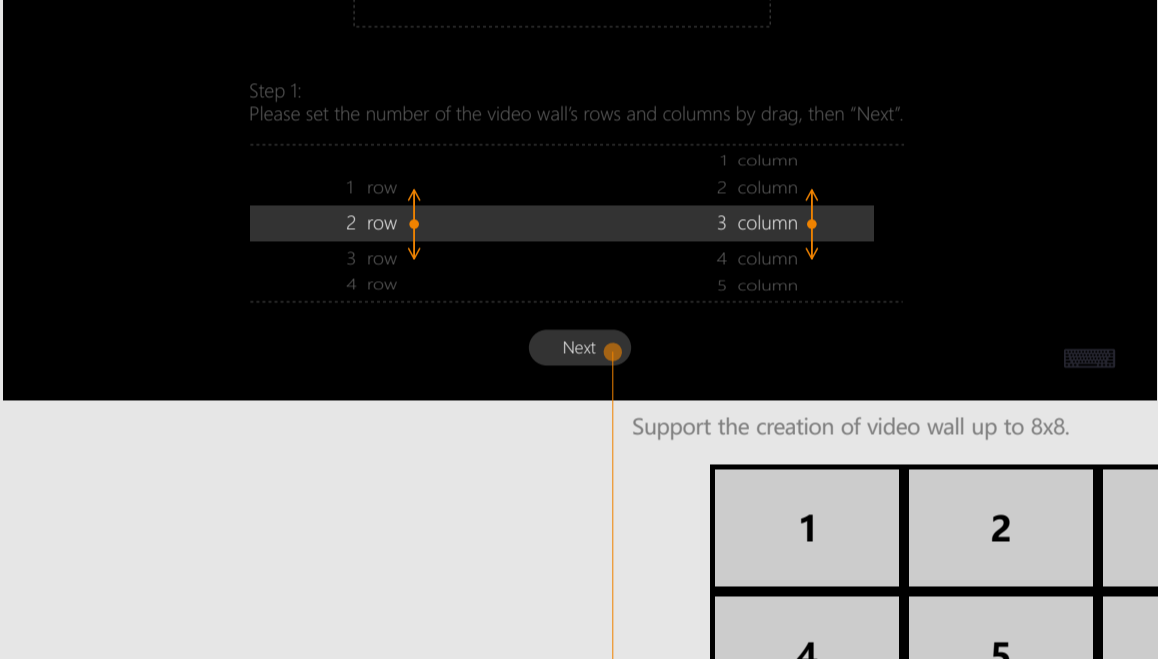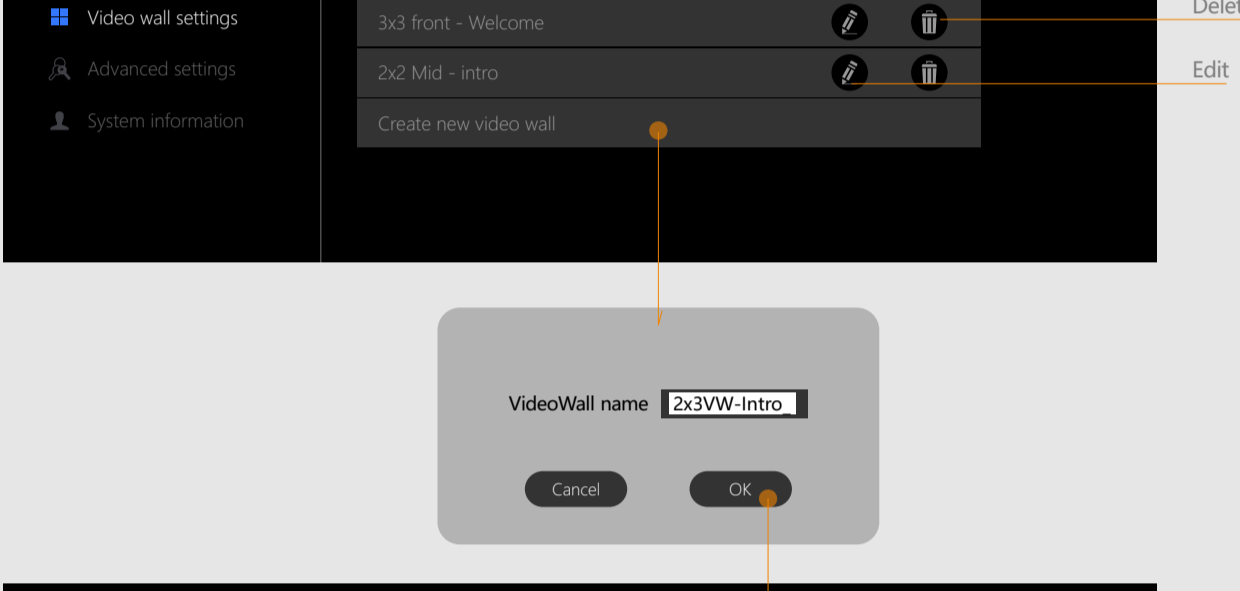


Support the creation of video wall up to 8x8.

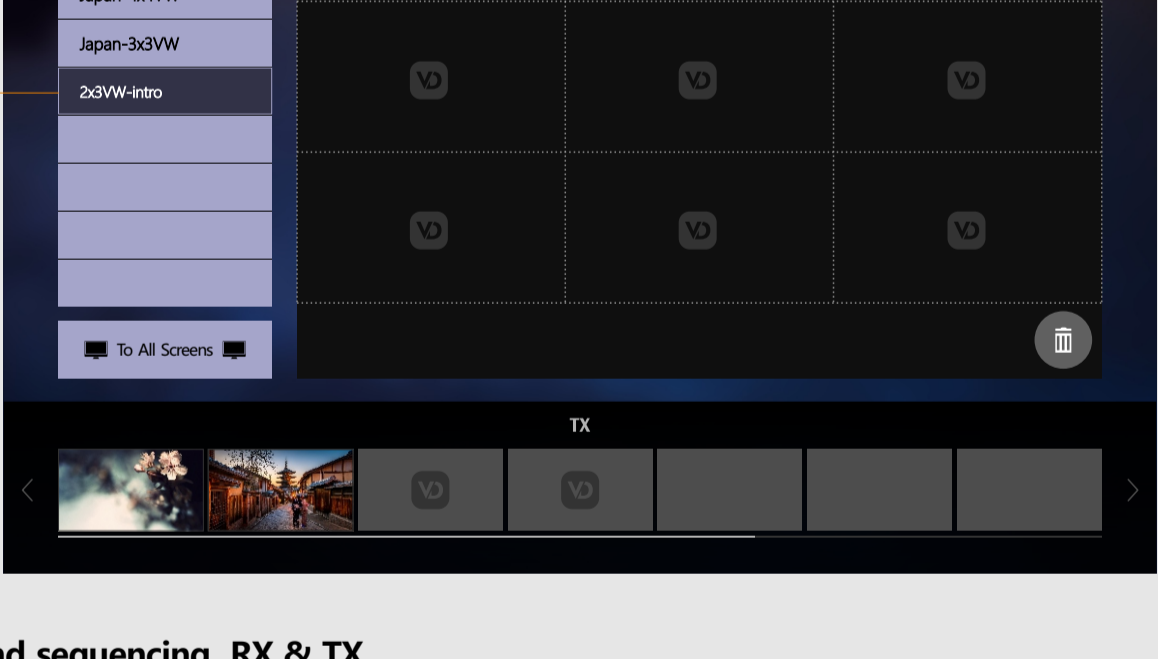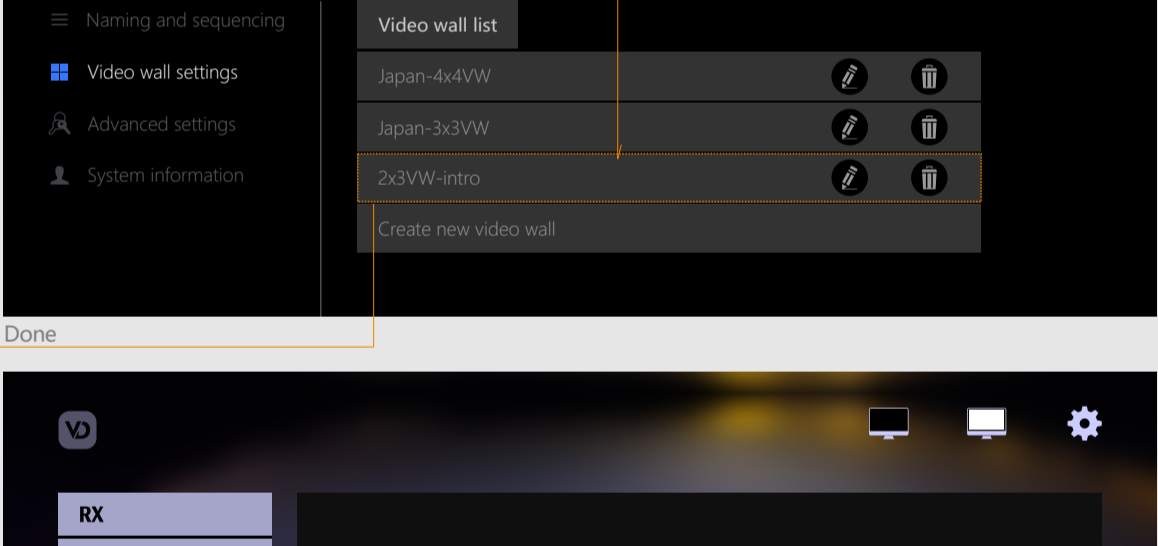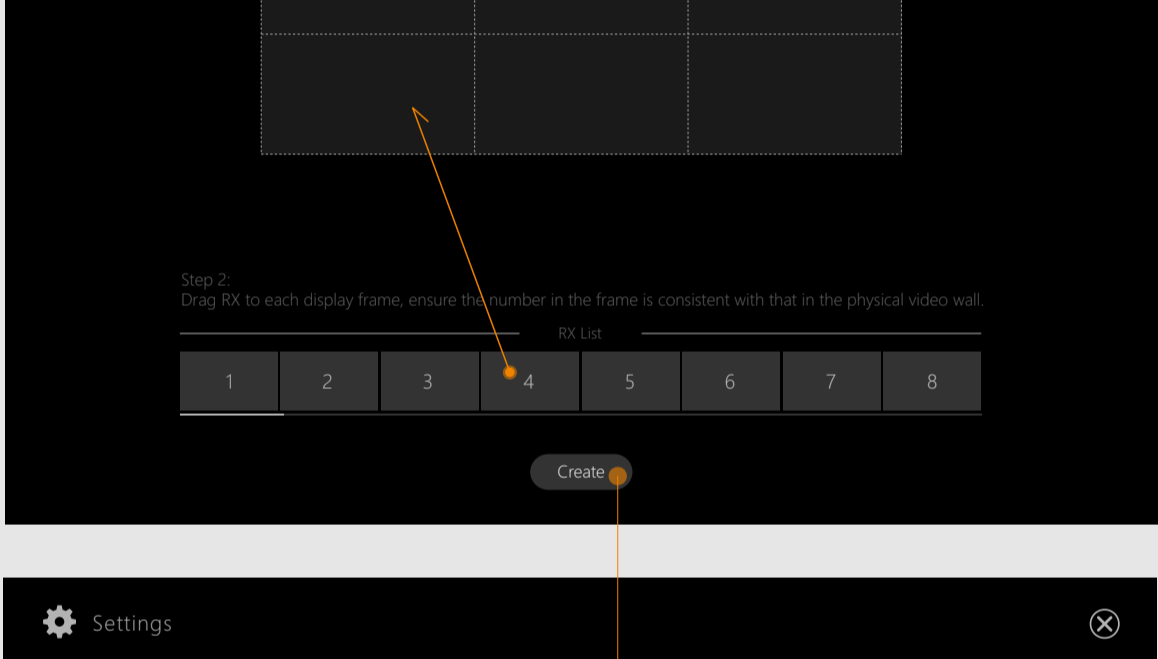



## Naming and sequencing RX & TX

Settings ---- Naming and sequencing

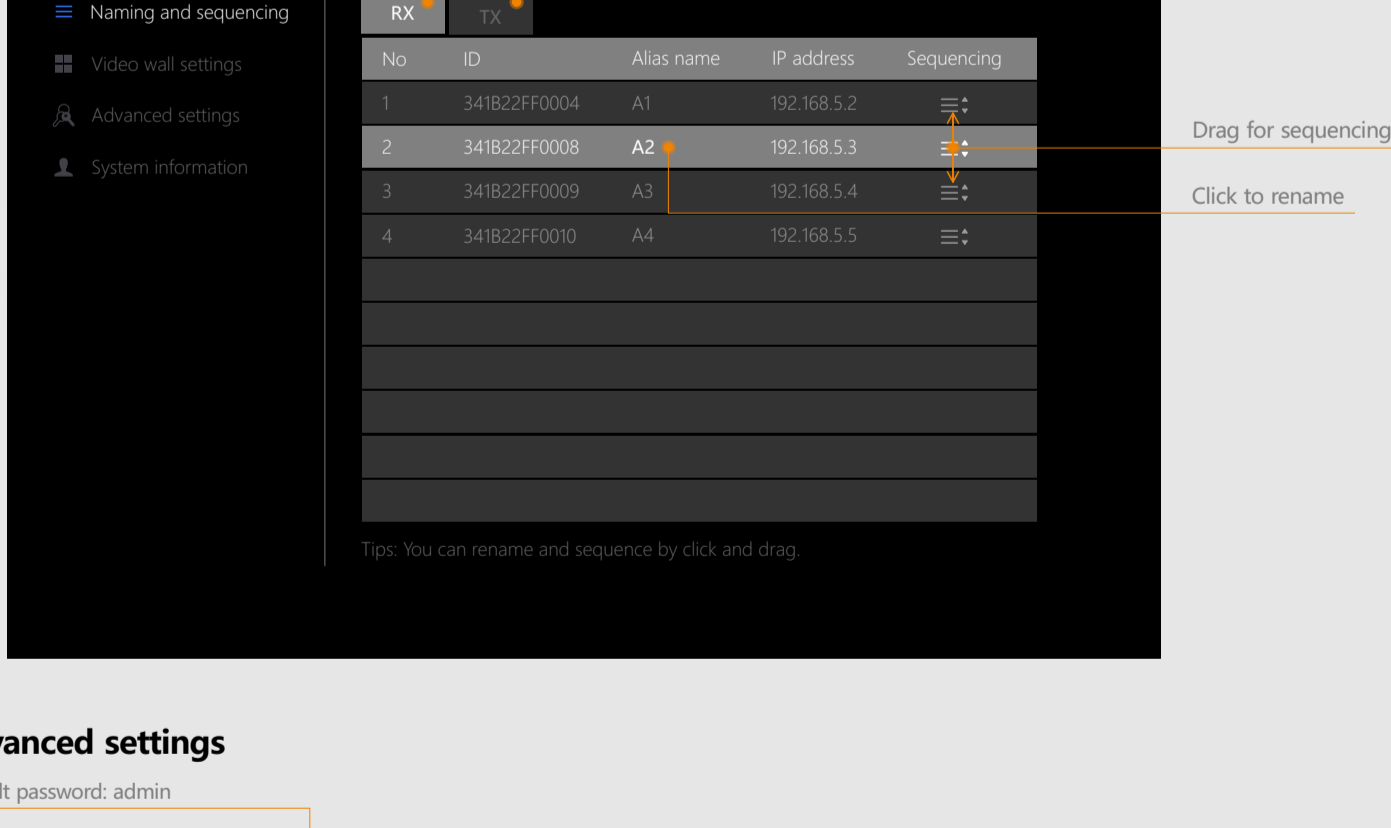

## Advanced settings

Default password: admin

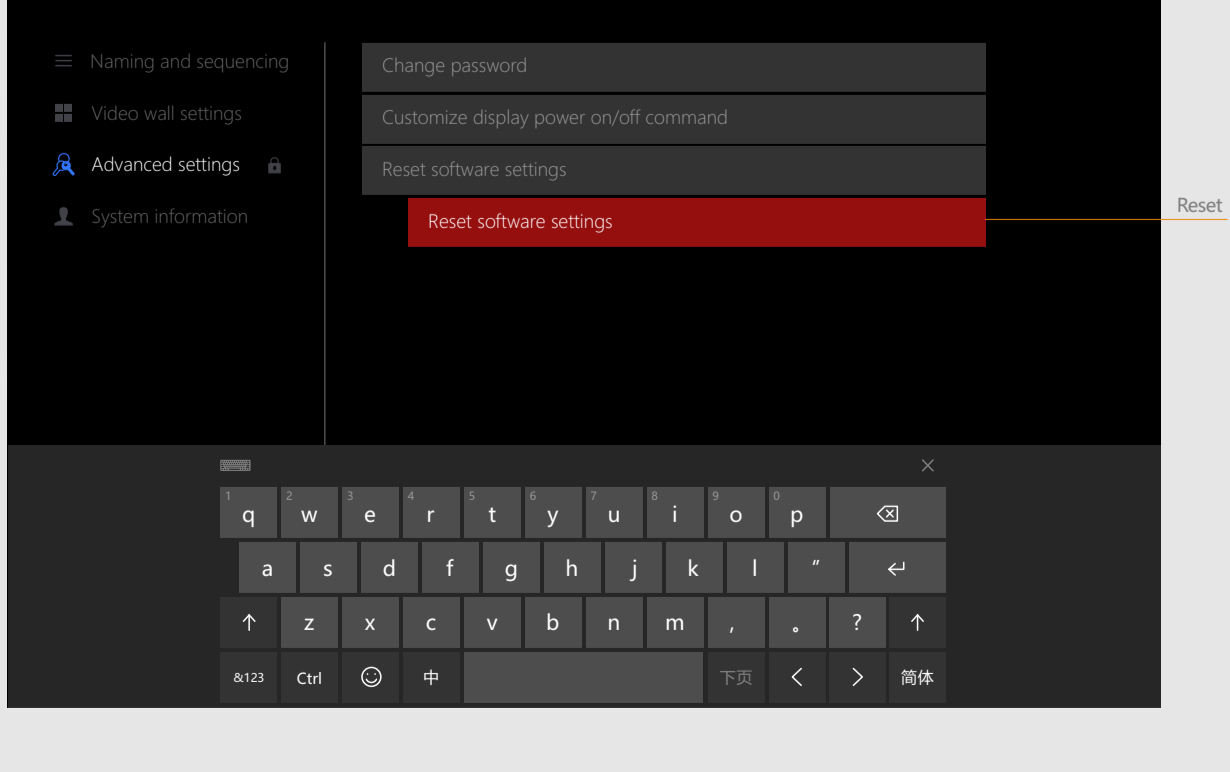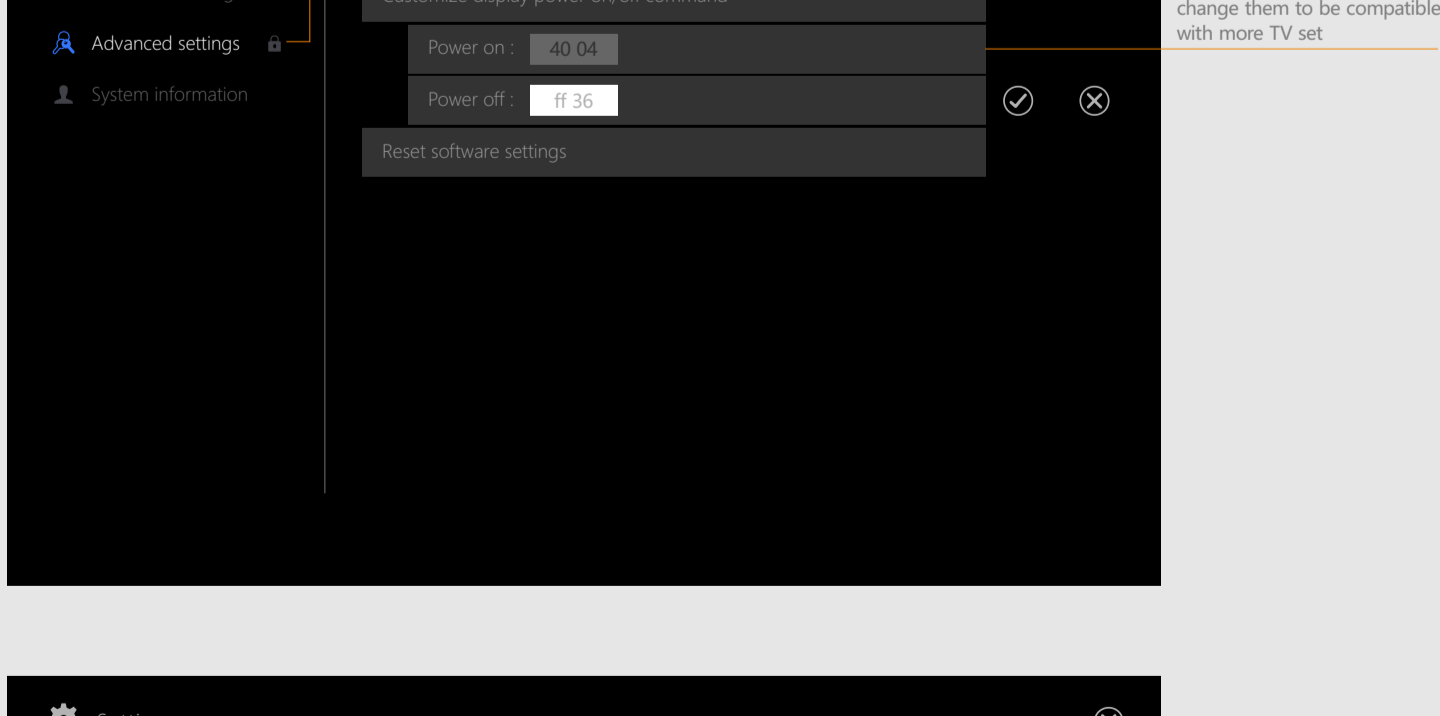

## Display control

The display must support CEC, and it should be turned on for control.

